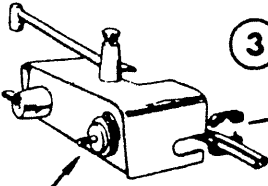


 
#1230

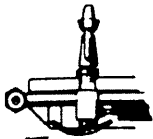
INSTRUCTIONS


Water supply to DISHMASTER must be turned off to make this replacement.

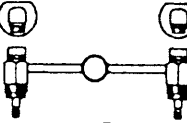
- 1** Remove Screws & pull Handles forward to remove.

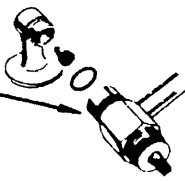

 - 2** Unscrew Largest Kurled Rings & pull Large Chrome Cover forward to remove.


 - 3** Push out to remove Hose Assembly from Cover.


 - 4** Pull to remove Clear Plastic Tube from Hose & Tank. With Spout pointing straight forward, lift Tank up to remove.


 - 5** Unscrew Knurled Union Nuts to remove Valve Body Assembly from Unions. NOTE: Upon re-assembly, be sure the O-Ring Seals in the Union Heads are in place (See picture below). "DO NOT" over tighten the "UNION NUTS." Lightly snug with pliers only. "DO NOT" use wrench as O-Ring Seals are used.


 - 6** Install New Screens & O-Rings in Union Heads.
 - 7** Using the Hex Wrench, unscrew the Inserts inside the Union Nuts. The end of these Inserts is your Removable Valve Seat. Place the New Valve Seats into the Union Nuts and re-assemble into Body with Hex Wrench, being sure the Union Nuts swivel freely when Insert is tightened.


- NOTE:**
Clean Detergent Tank before re-assembly.
- CAUTION:**
Lubricate all O-rings with vegetable oil before assembly
- 8** Re-assemble Unit by reversing above Steps 5 thru 1.

NOTES:

Lubricate o-rings with vegetable oil before attempting assembly.

Follow step #11 on page 2 of your Service Manual for correct setting of valve handles.