

#252  
or  
#254

## INSTRUCTIONS

Water need not be turned off

- 
1. Remove screws and pull handles forward to remove
  2. Unscrew largest knurled rings & pull large chrome cover forward to remove.
  3. Push out to remove Hose Assembly from Cover
  4. Pull to remove clear plastic tube from hose & tank. With spout pointing straight forward, lift Tank up to remove.
  5. Wash Detergent tank thoroughly.
  6. Unscrew hex nut to remove hose from unit.
  7. Using a pair of pliers CAREFULLY unscrew the nut from the handle.
  8. Slide the handle back on the hose and allow the button to drop out.
  9. Slide the handle completely off hose and replace with new nose.
  10. With the handle upside down, install red button and slide the handle back over valve.  
**CAUTION: THE BUTTON MUST BE PRESSING ON THE SIDE OF THE VALVE THAT HAS SPRING.**
  11. Screw the nut back on to the handle approximately three full turns by hand before tightening gently with pliers. Adjust the direction of the brush to suit your most comfortable position for washing dishes by twisting the tube in the nut.
  12. Reassemble the unit by revering steps above.

. NOTE-Follow Step No.11 on Page 2 of your Service Manual for correct setting of valve handles on Models M59 through M87.