


INSTRUCTIONS

Water need not be turned off.

- 1 Unscrew Spray Unit.
- 2 Slide Handle back along Hose, let Red Button drop out.
- 3 If "Body" is made of Brass, you must purchase the Hose Assembly No. 254. If "Body" is made of Plastic, continue with the following instructions.
- 4 Press down on Spring, with Special Tool, between T-Shaped Surfaces of Yoke and twist Tool ¼ turn to release Spring.
- 5 Spread apart T-Shaped Surfaces of Yoke and lift off Yoke and Needle Valve.
- 6 Put New Needle Valve, pointing up, in Slot at Base of New Yoke. Now lift Yoke onto Body so that Needle Valve enters hole in Body.
- 7 Put New Spring in hole at top of Body.
- 8 Press Spring down into hole with Special Tool and at same time squeeze Yoke so that its T-Shaped Surfaces engage over top of Spring.
- 9 Turn Handle so that Button hole is on Bottom, so Red Button can be dropped into it from inside.
- 10 With Button in place, slide Handle forward over Body WITH T-SHAPED SURFACES OF YOKE TOUCHING RED BUTTON.
- 11 Screw Spray Unit back onto Handle to complete reassembly.

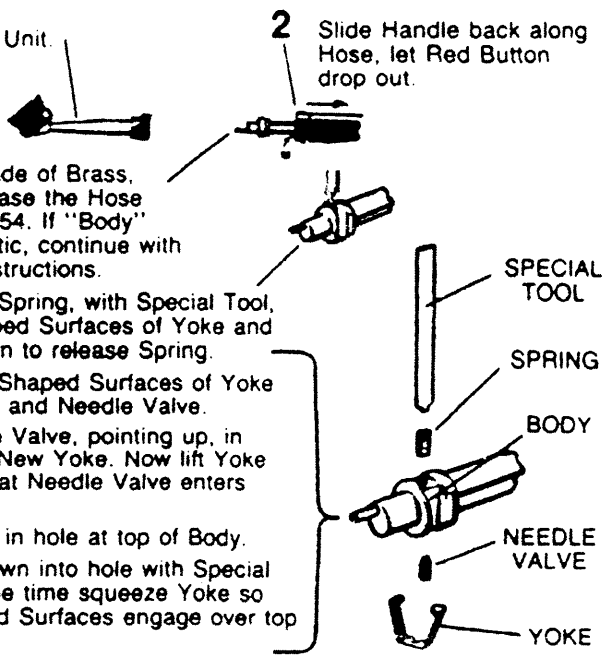

NOTE: Lubricate the bushing on the spray unit tube and the needle valve with vegetable oil before re-assembly.

If your DISHMASTER still does not draw suds properly, it may be necessary to back-flush the unit or to install a new hose assembly (#254). See the service manual or consult your dealer.