


INSTALLATION INSTRUCTIONS
MODEL 2000

SPOUT REMOVAL

1. Unscrew Chrome Spout Retaining Nut. If you find it necessary to use pliers, pad the jaws, so you do not damage the Retaining Nut.
2. Pull straight up on the Spout Assembly to remove it from the Valve Body Assembly:

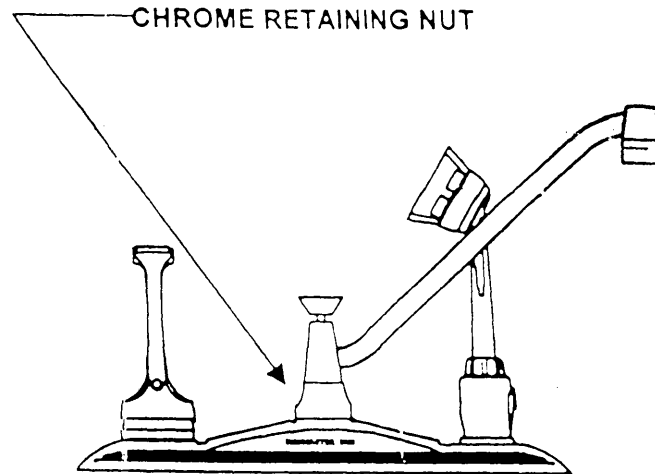

SPOUT INSTALLATION

1. Remove Chrome Retaining Nut from old Spout. With Spout upside down, use a small screwdriver or a pencil point to hold one end of the Red Lock Ring in place, and then use another small screwdriver or knife point to pull the other end of the lock ring out of the groove and up.
2. Place Retaining Nut on new Chrome Spout, and then position new Red Lock Ring, with tapered side up, on large spout end and slide it past the O-ring and into the retaining ring groove.

CAUTION: BE SURE RED LOCK RING IS IN THIS GROOVE.

3. Lift up and hold Diverter Knob in raised position and slide large spout end into the Valve Body until the lock ring makes contact with the Valve Body.
4. Screw Chrome Spout Retaining Nut onto Valve Body
CAUTION: DO NOT OVER TIGHTEN NUT AS CHROME SPOUT MUST SWIVEL FREELY.

