


#1086

INSTRUCTIONS

Water supply to DISHMASTER must be turned off to make this replacement

1. Remove screws & pull handles forward to remove

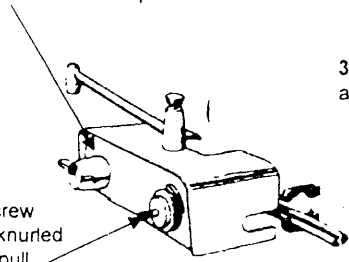

2. Unscrew largest knurled rings & pull large chrome cover forward to remove.

3. Push out to remove hose assembly from cover

CAUTION:
Lubricate all O-rings with vegetable oil before assembly

4. With both valves CLOSED, remove the knurled retaining nuts and pull straight out to remove stem assemblies

5. Screw new red and blue threaded bushings on to the stems until they touch the stem ends. UNSCREW EACH APPROXIMATELY ¼ TURN. Push stem assemblies straight in to the body, engaging the 2 lugs on the bushings into the slots in the body. Replace the new knurled retaining nuts. Tighten with pliers.



Pull to remove

NOTES:

- Clean detergent tank before re-assembly.
- Lubricate O-rings with vegetable oil before assembly
- Follow step 11 on page 2 of your service manual for correct setting of valve handles.